

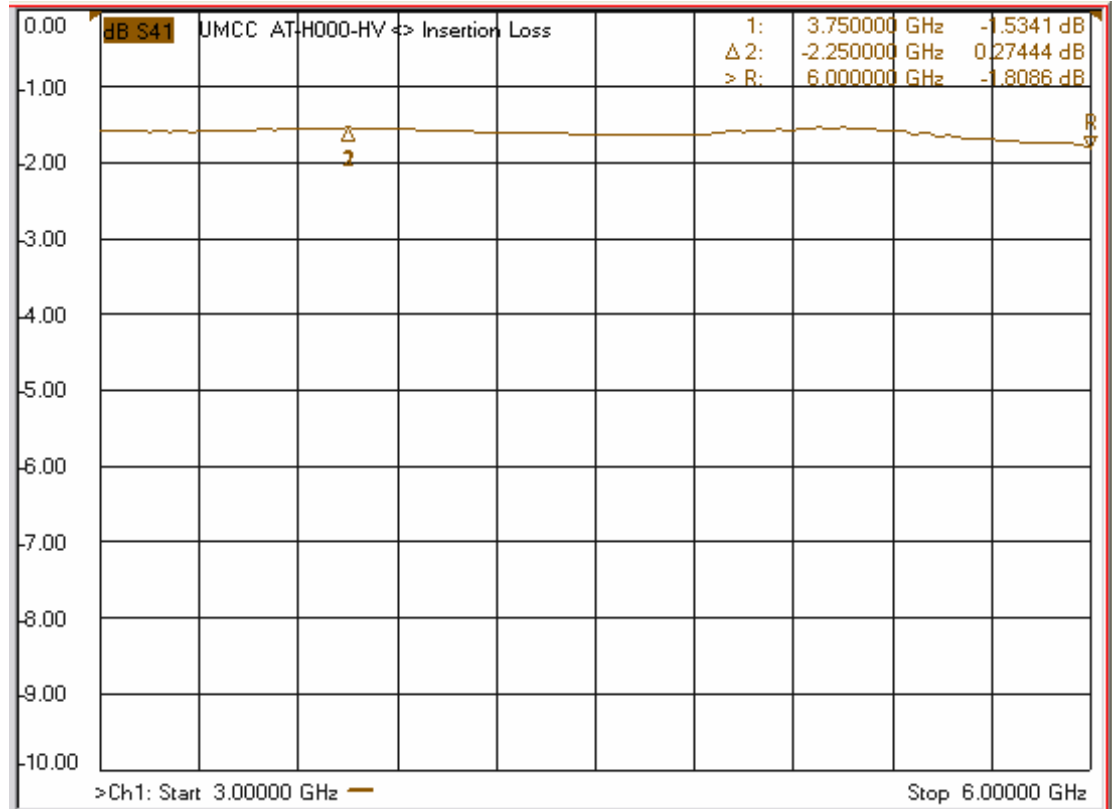


Model: AT-H000-HX

- Insertion Loss

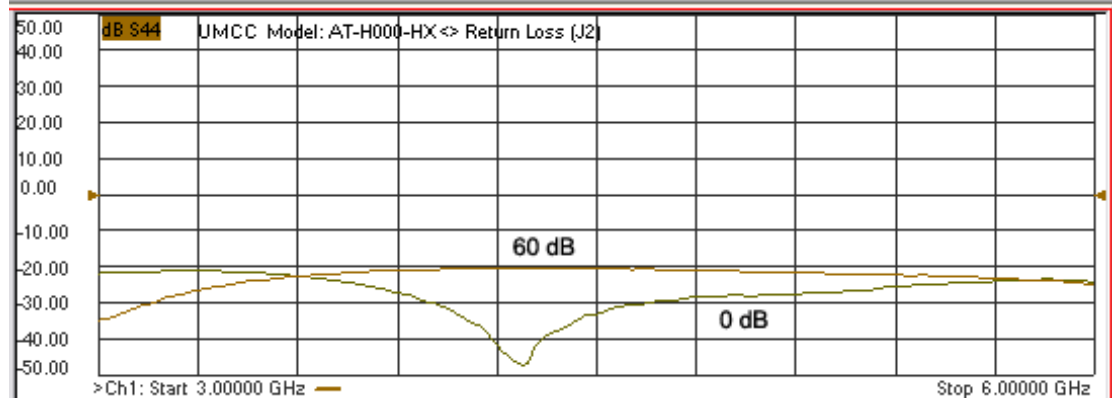


- Return Loss

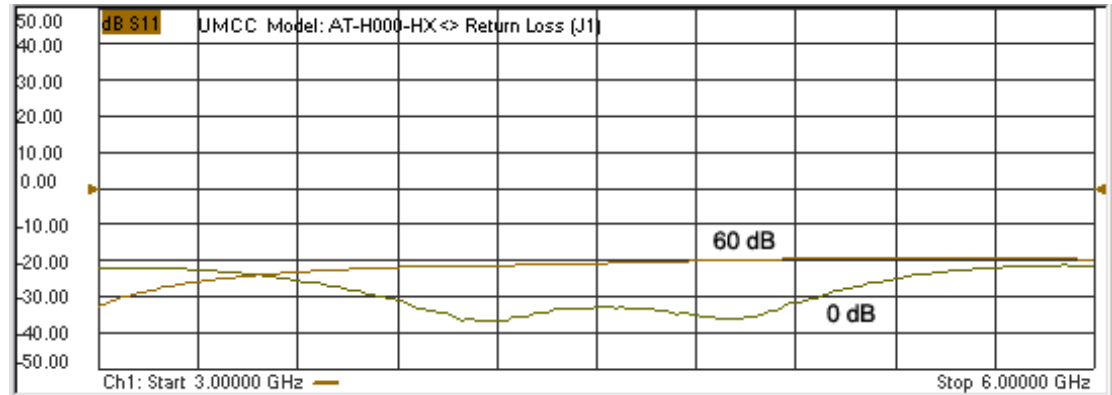


Model: AT-H000-HX

- Attenuation Range

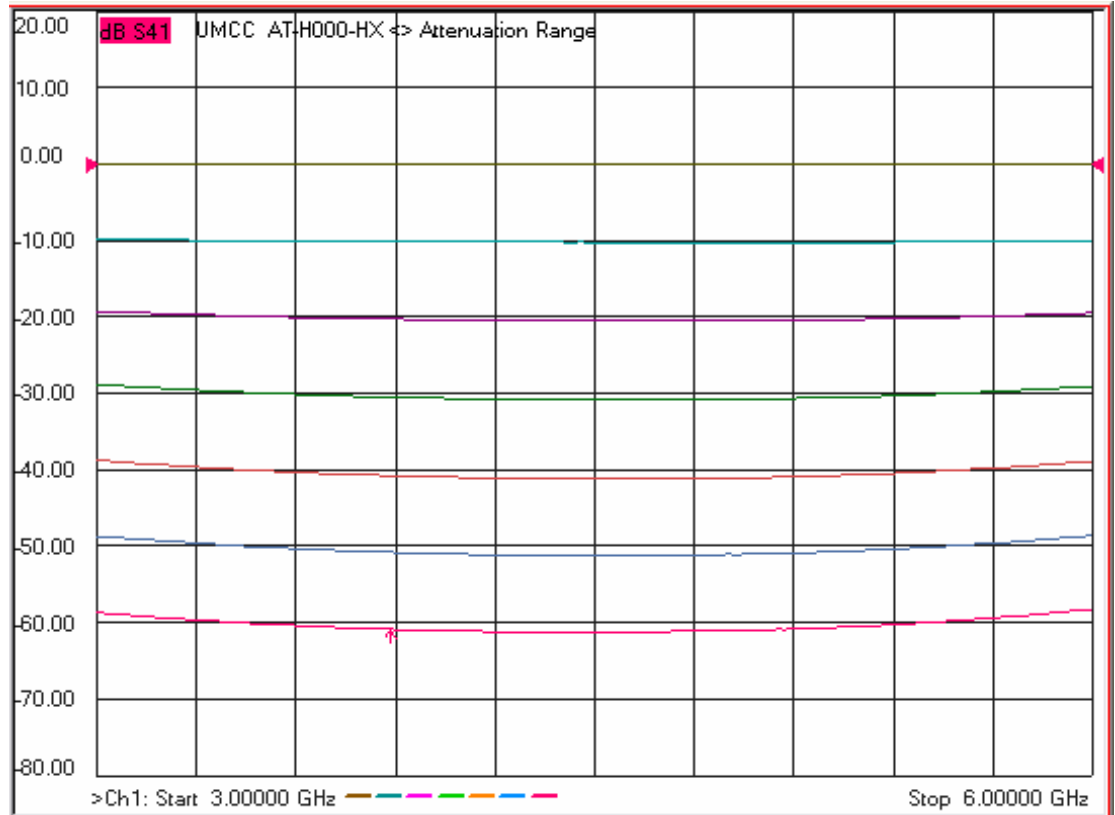

- Phase Shift

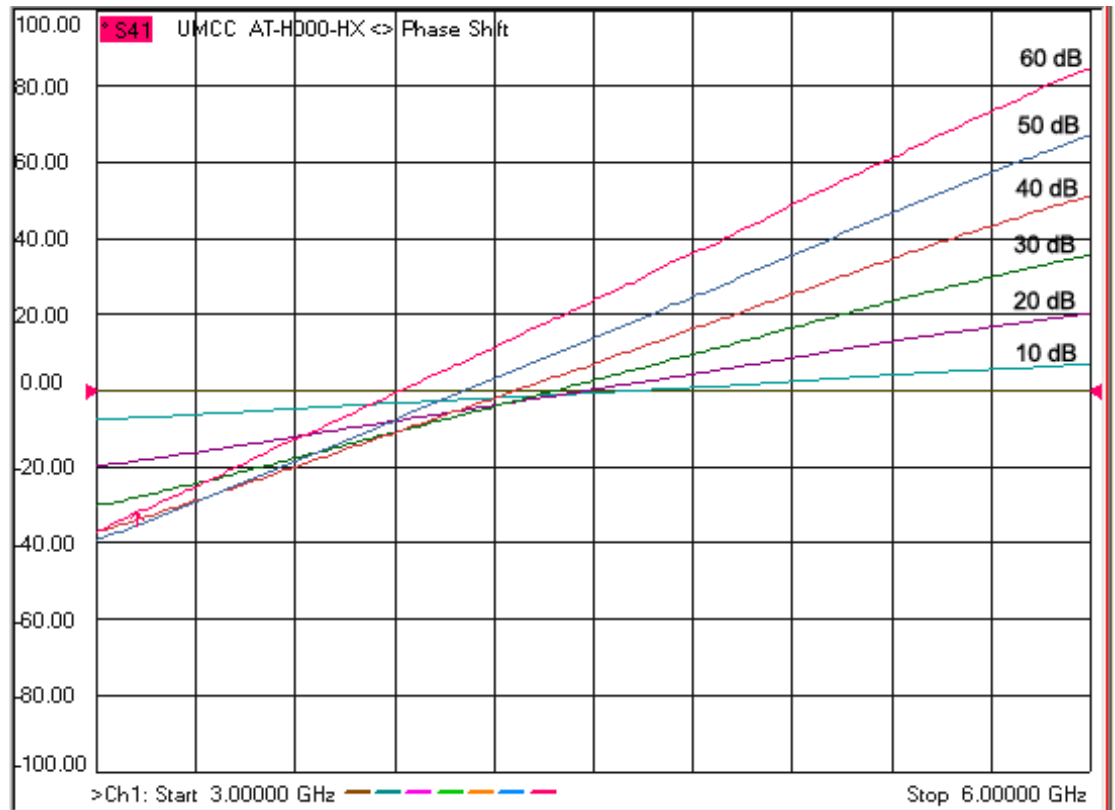

Model: AT-H000-HX

-Attenuation Flatness-

