


Model: PS-B000-2S

-Insertion Loss

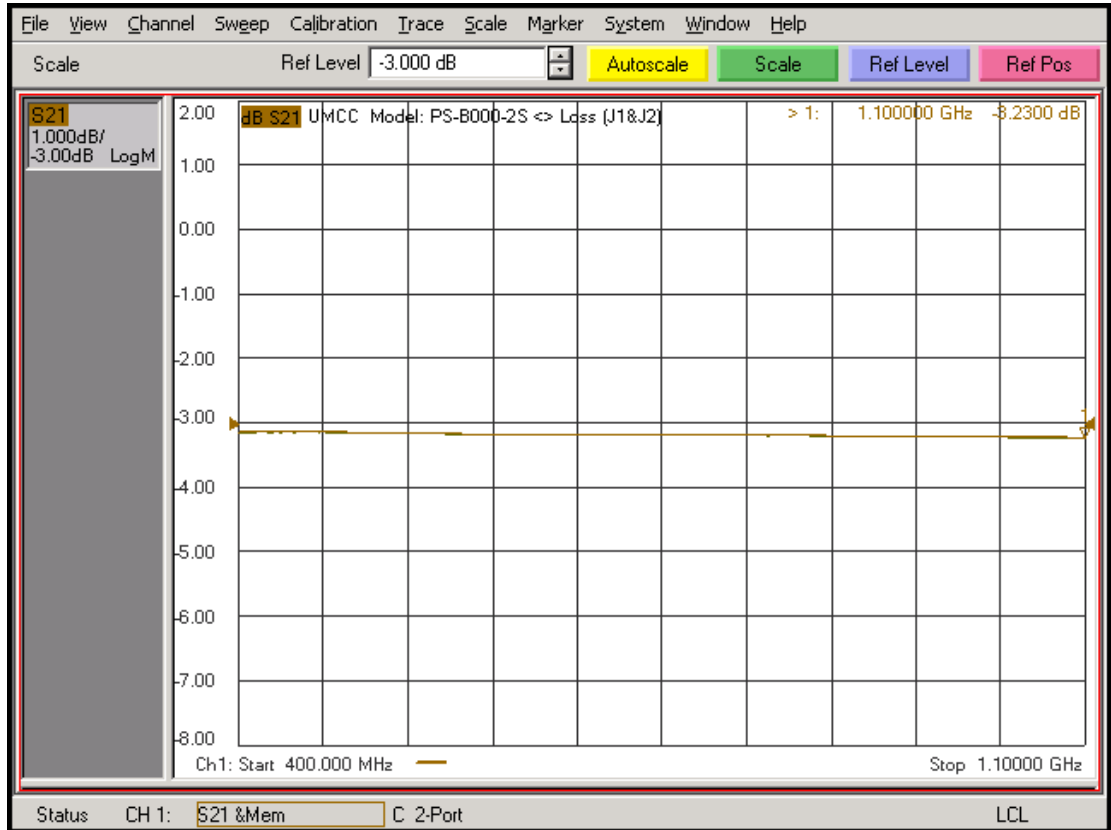


-VSWR



Model: PS-B000-2S

-Isolation

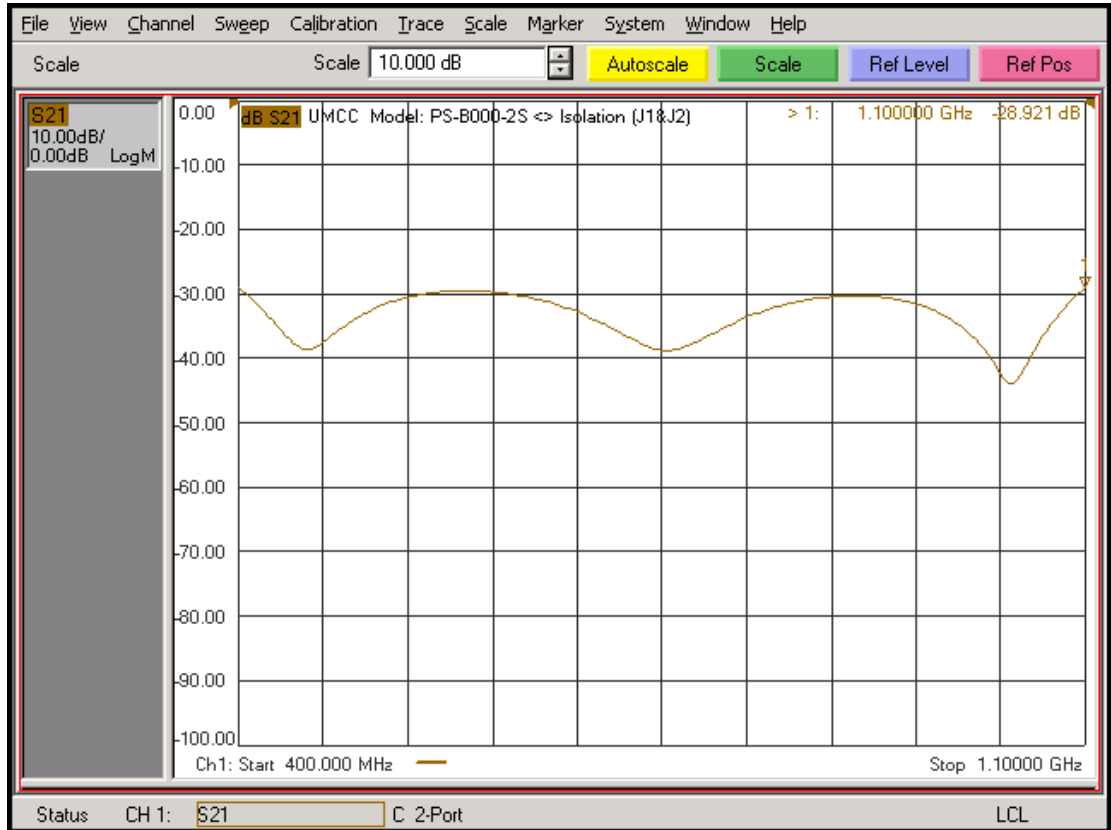

-Phase Error

