



Model: PS-D000-6S

- Insertion Loss

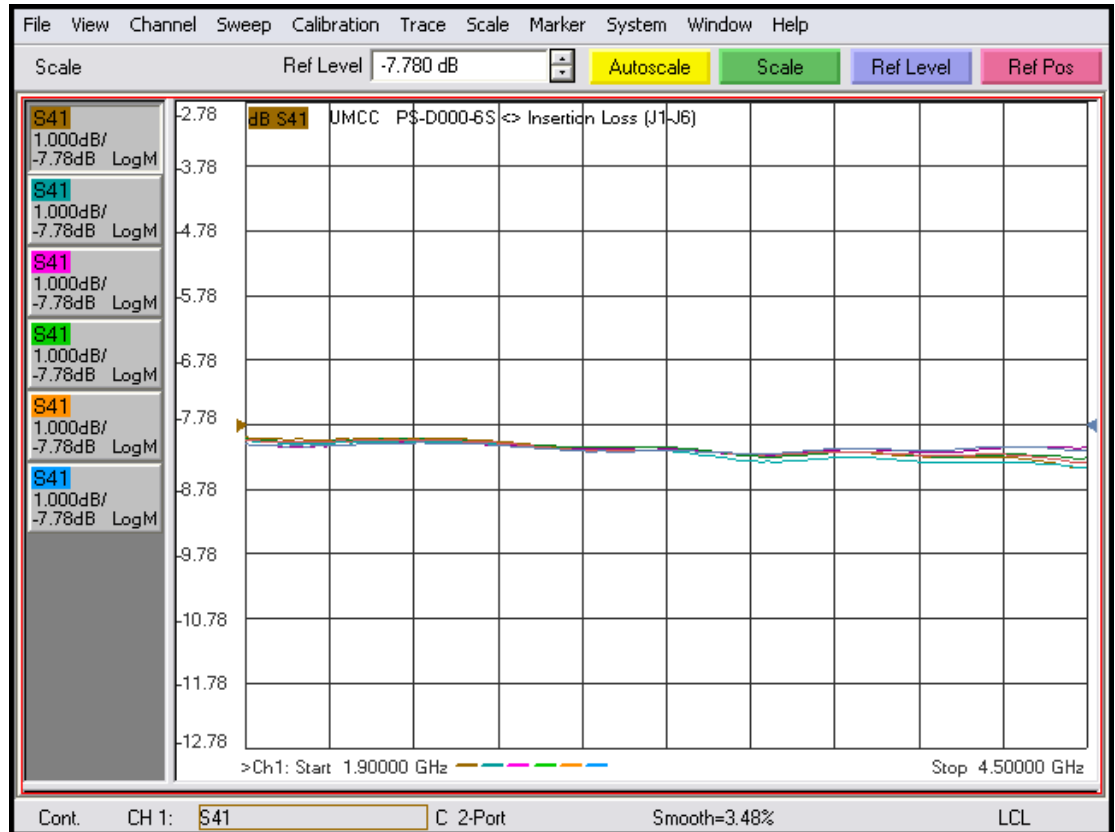

- Return Loss

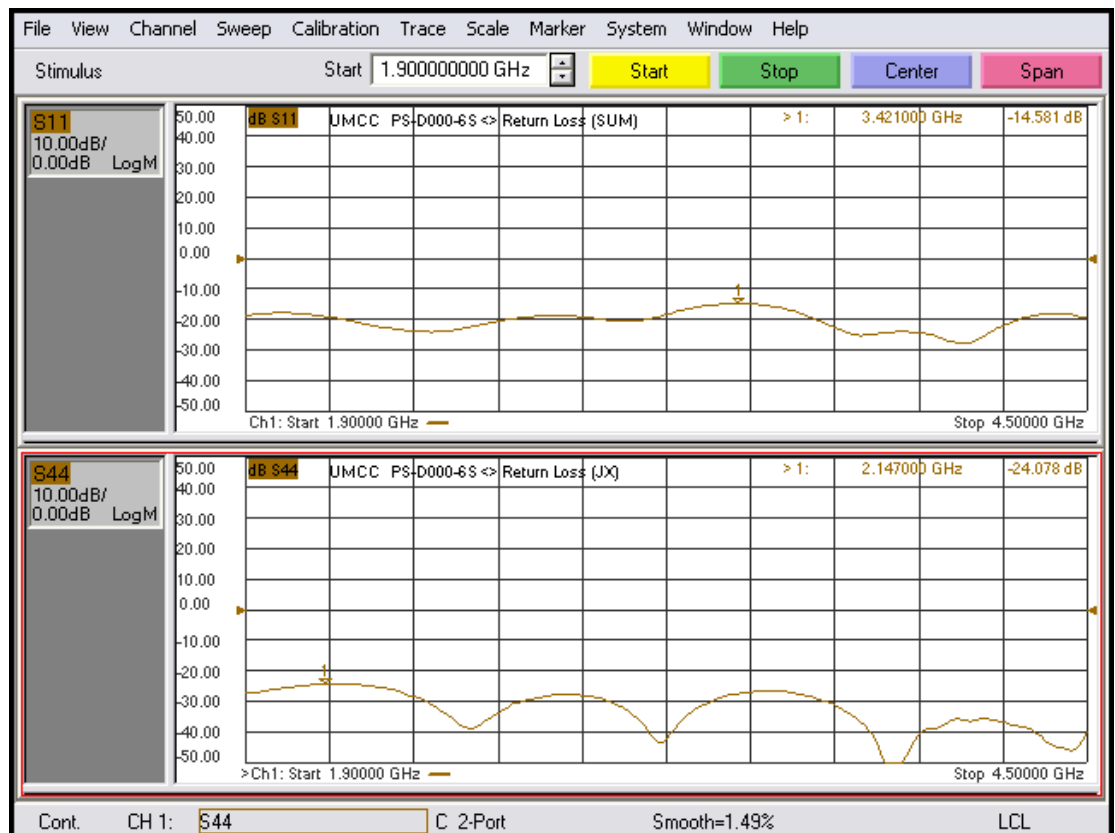

Model: PS-D000-6S

- Isolation



- Phase Error

