



Model: PS-E000-8S

-Insertion Loss

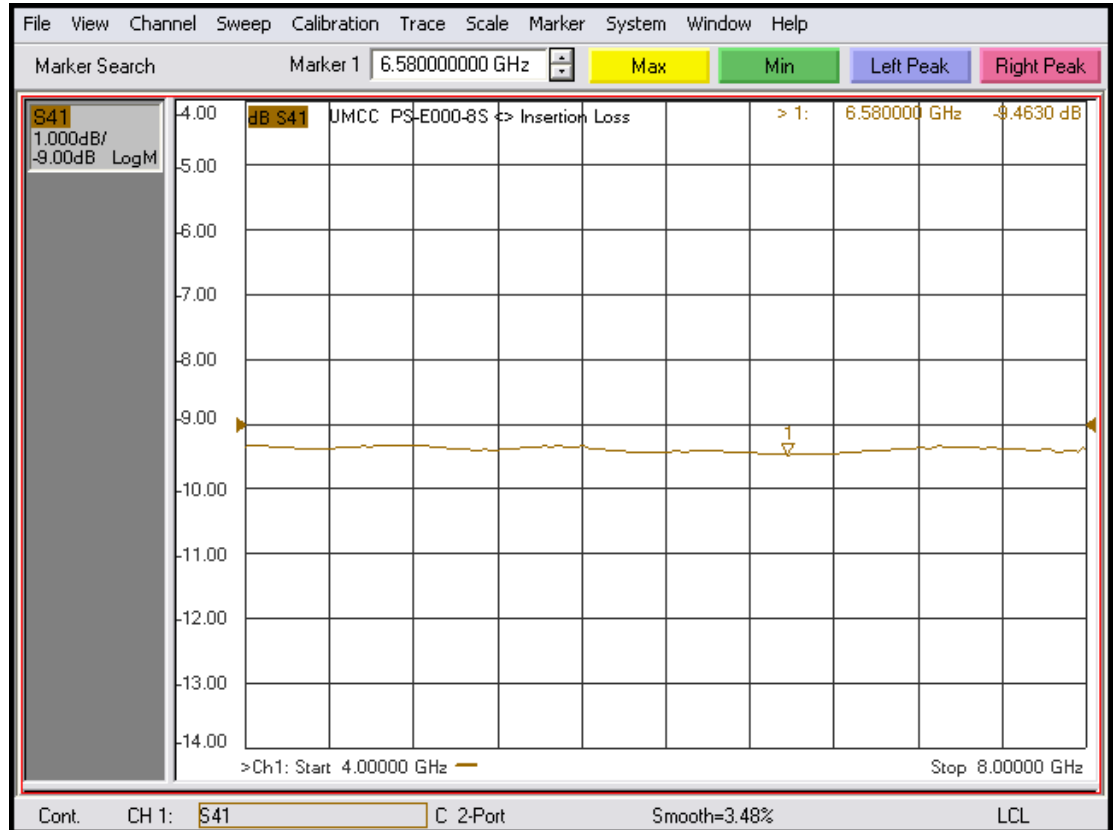


-Return Loss

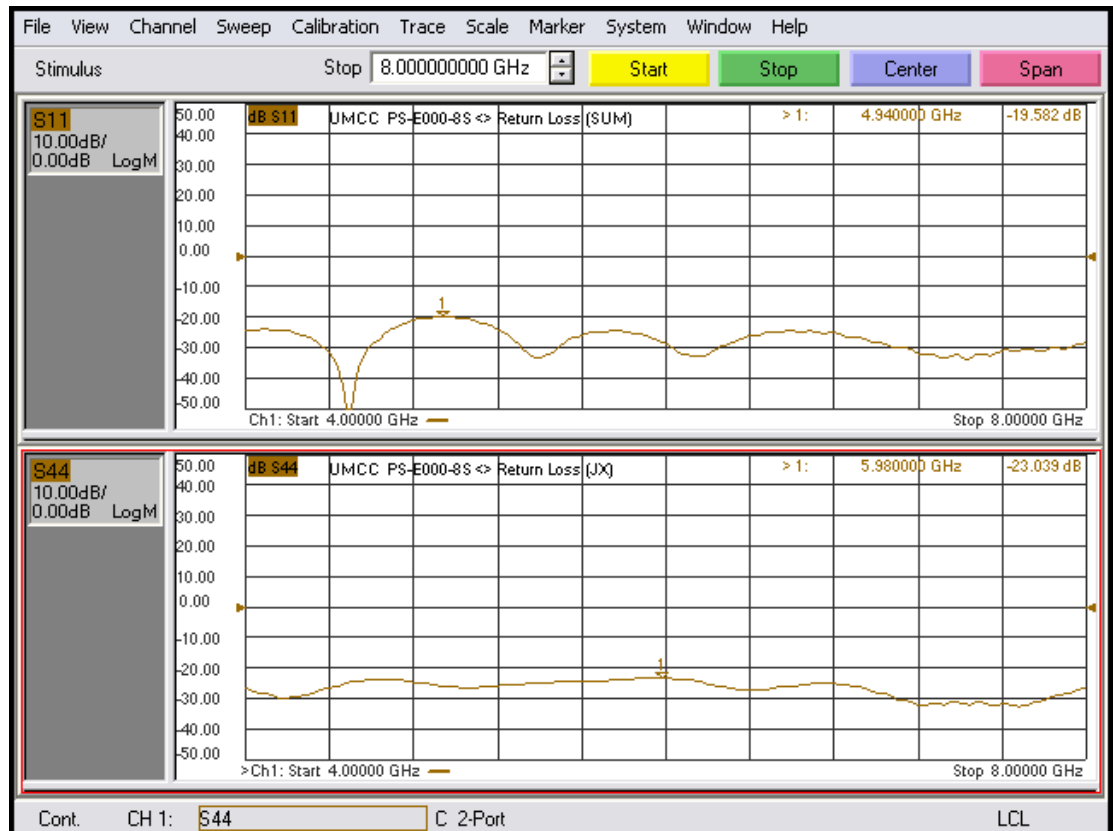

Model: PS-E000-8S

-Isolation

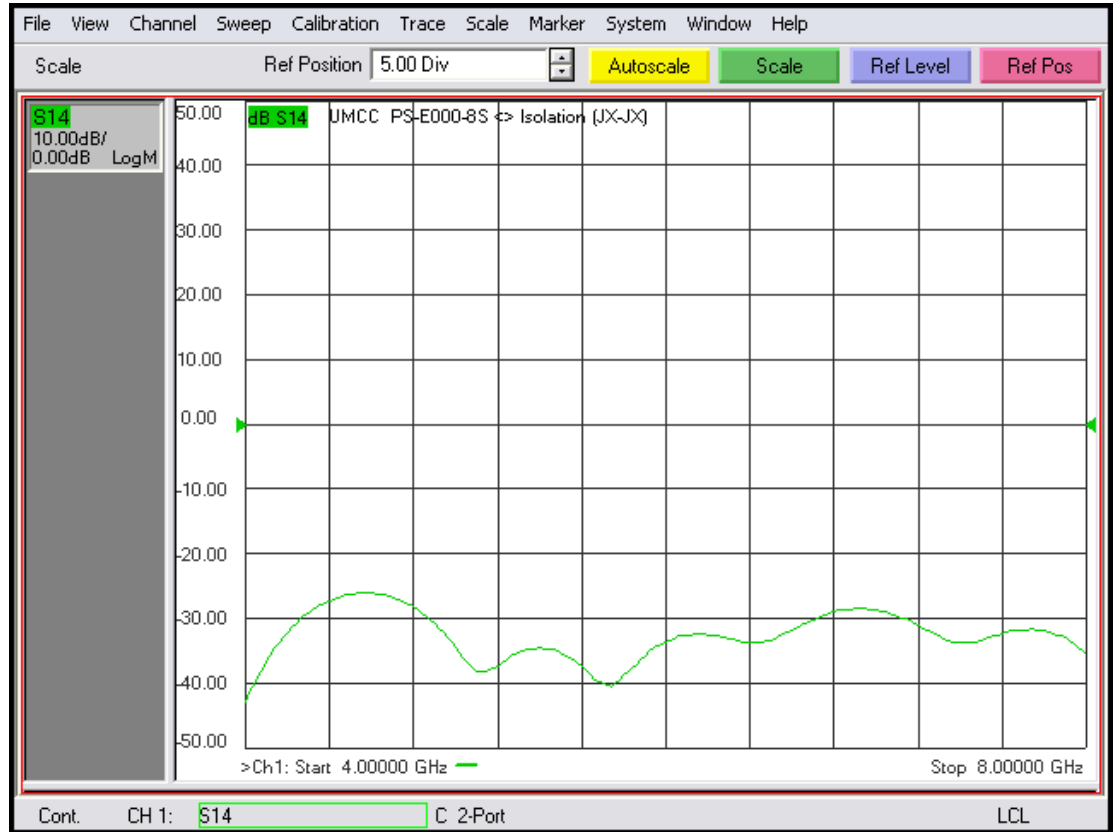

-Phase Error

